

5.8GHz Receiver Monitor

user manual v1.0



Description

Thanks for purchasing our 5.8GHz receiver monitor. The 5.8GHz receiver monitor is a multifunctional monitor. It integrates the receiver, display screen, and the battery. The rate capacity of single cell battery is 4200mAh. The built-in 8 channels 5.8GHz receiver, the frequency of each channel refers to the Channel Table section. The monitor also provides various charge methods.

Product Contents



Mainframe



Outdoor Screen Shroud



AV out / AV in Cable



Antenna



Mounting parts


Specification

- Power supply: 5V
- Frequency: 5.8GHz
- Available Channel: 8CH
- Antenna Connector: SMA
- Screen size: 7"
- Dimension: 170*114*23mm

Channel Table

Channel Number	Frequency
Channel 1	5733 Mhz
Channel 2	5752 Mhz
Channel 3	5771 Mhz
Channel 4	5790 Mhz
Channel 5	5809 Mhz
Channel 6	5828 Mhz
Channel 7	5847 Mhz
Channel 8	5866 Mhz

Operation diagram

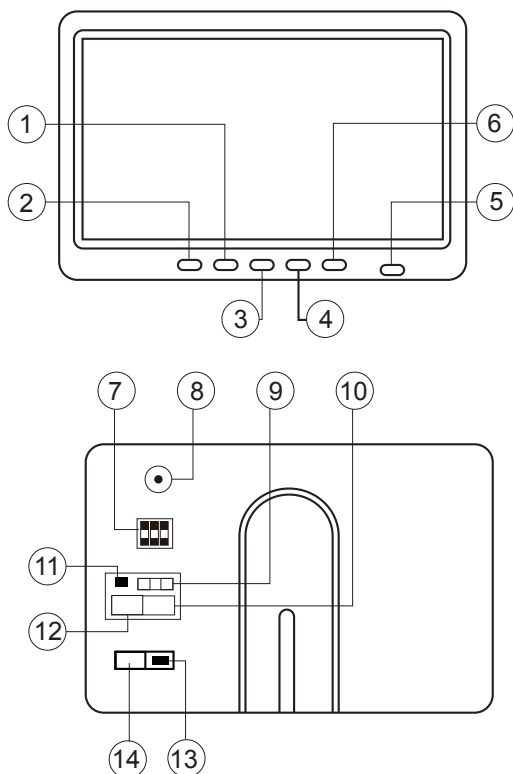

- 1 Display rotate
- 2 Signal source switcher, switch the input between video-1 and video-2
- 3 Menu, open the setting panel of the screen display function
- 4 Volume increase
- 5 Screen on-off
- 6 Volume decrease
- 7 Channel switcher
- 8 SMA connector, the receive-antenna must be connected with this connector
- 9 The main power on-off, user show turn off this button to shut down the monitor
- 10 The video-1 output and video-2 input, it uses for input the second source from the third-party and output the source of the built-in receiver.
- 11 The power-on LED-indicator
- 12 The rapid charge slot, it applies to the rated voltage 4.2V and rated current 1A DC-power.
- 13 The micro-usb charge LED-indicator
- 14 The micro-usb charge slot, it applies to the rated voltage 5V and rated current 1A DC-power.

Installation



- 1 Connect the antenna with the SMA connector.
- 2 Check the channel is the same as Tx
- 3 Switch on main power

Distribution

North America

Distributed by :
HRP Distributing
 2034 South 3850 West Salt Lake City,
 UT 84104 USA

For customer service please contact
 Support@trobotixusa.com
 Support@thundertigerusa.com
 Tel : 1-844-887-6268
 Attn : TT Support

Germany, Netherlands, Belgium, Luxembourg, Austria, Italy

Distributed by / Vertrieb :
THUNDER TIGER EUROPE GmbH,
 Rudolf-Diesel-Str. 1, 86453 Dasing, Germany

For customer service please contact
 service@thundertiger-europe.com

For Other Countries

Distributed by :
Thunder Tiger Corporation
 No.7 6th Road, Industry Park,
 Taichung, Taiwan 40755

For customer service please contact
 service@thundertiger.com
 Tel : 886-4-23591632



JC7408