

OSD Firmware Upgrade

This upgrade has solved the display info shifted issue, with an option to select different flight display mode. The user can upgrade the OSD software by insert micro SD card, and the OSD will upgrade itself automatically once the power is on.

Upgrade steps :


1. Visit www.ttrobotix.com and download the new firmware to Micro SD card.
(Please download the file at the root manual. i.e: Do not place the download file in any folder)
2. Insert the Micro SD into OSD.
3. Power on OSD
4. The OSD should update the firmware automatically by itself. The power indicator should flash red & green.
5. The power indicator will turn to solid red once the upgrade is done.

* The upgrade process should take less than 5 sec. If the upgrade is not success, please use the Micro SD cards from different manufactures and try again.

How to switch modes?

- Press Mode bottom once
- Red means: Detail Mode
- Green means: Compact Mode

Detail Mode

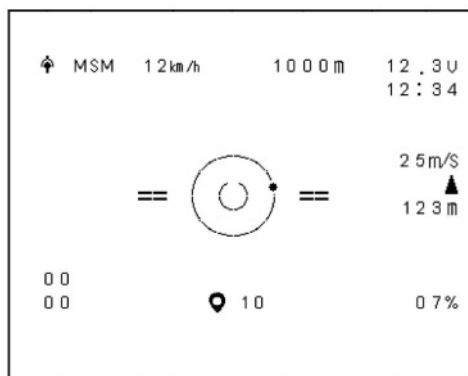

Compact Mode

